


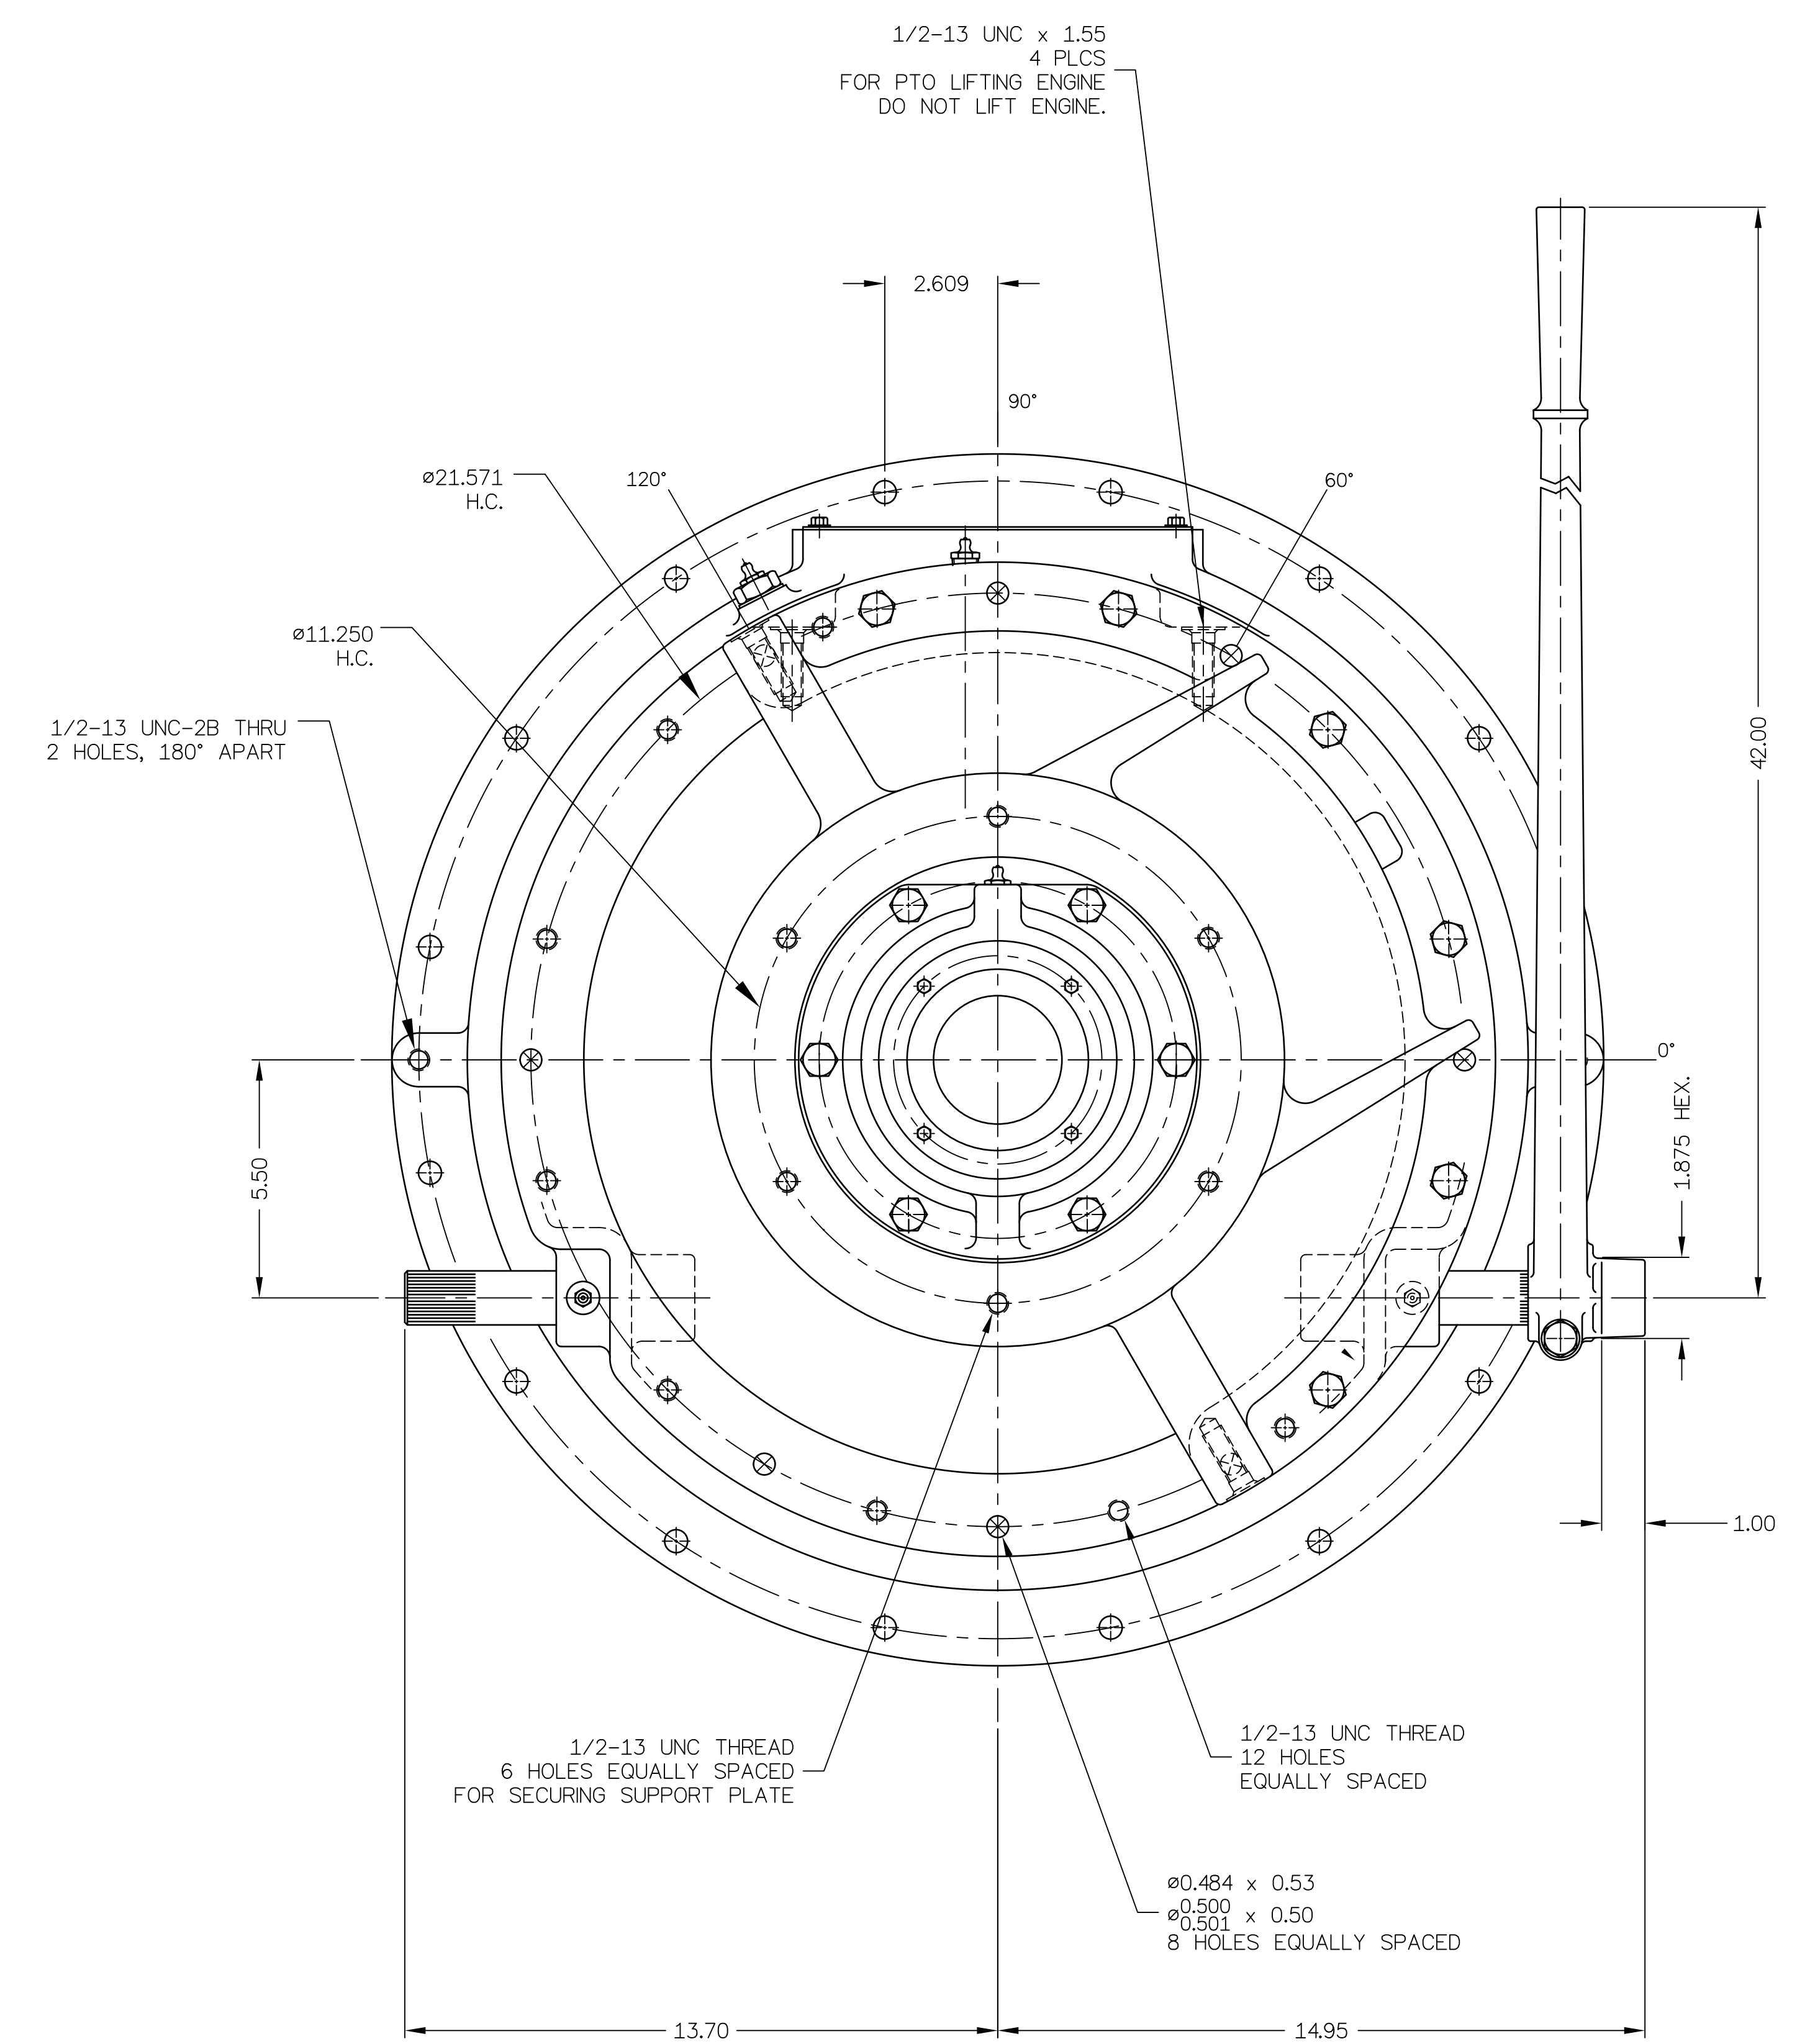

- GENERAL NOTES:
- (K) a.) REFER TO BOM LIST WHEN ORDERING PARTS.
 - (K) b.) REFER TO CARE AND OPERATION MANUAL FOR ADDITIONAL INFORMATION.
 - (K) c.) SHEAVE HOUSING OPENING MAY BE POSITIONED IN 0°, 60°, 90°, OR 120° INCREMENTS.
 - (K) d.) SHEAVE HOUSING MUST BE PILOTED ON BOTH DOWEL PINS.(SHOWN IN 120° POSITION)
 - (K) e.) DEFLECTION OF P.T.O. SHEAVE HOUSING NOT TO EXCEED .010 T.I.R. MEASURED AT SUPPORT PLATE PL076 DURING DRIVE BELT TENSIONING.
 - (K) f.) SHIPPING STRAP ADDED FOR STABILITY OF SHAFT AND BEARINGS WHILE IN TRANSIT. REMOVE STRAP BEFORE INSTALLING UNIT.
 - (K) g.) "C" DIMENSION USED TO DETERMINE LOAD CAPACITY.
 - (K) h.) DIMENSIONS WITHOUT TOLERANCES ARE FOR REFERENCE ONLY.

[illegible]